

# USER MANUAL

## **Sweeper** PRO

Artificial Grass Power Brush & Cleaner



## **Thank you for purchasing our product.**

Before you start using, please read the user's manual.

### **Checks before every use**

- Check the machine before every use.
- Do not use the SweeperPro if the safety mechanisms (start lever, safety brake, rear lid, or cover) are damaged or worn out.
- Never use the SweeperPro if the safety mechanism is blocked or missing.

### **NOTE:**

- Make sure that all nuts and bolts are pulled tight and that the SweeperPro is in good operating condition.
- Before starting work, inspect the area to be brushed.
- Check the work area for any foreign objects (e.g., stones, branches, rope) and remove them if necessary.

### **Proper use / Responsibility:**

- Do not place hands or feet under the SweeperPro.
- You are responsible for the safety of the methods of use described in this manual.

### **Instructions:**

- Work only under good visibility.
- Do not open the rear collection box cover during use.
- Acquaint yourself with the surroundings of your work area.
- Check for potential dangers, which may not be audible due to the noise of the machine.
- Wear solid footwear and long pants to protect your feet and legs.
- Make sure that your legs and body are at a sufficient distance from all moving parts.
- Make sure that no other people (particularly children) or animals are in the work area.
- Always push the SweeperPro at walking speed.
- Operating position: make sure that you have safe foot support during operation.
- Be especially careful when changing direction on a slope.

### **Attention!**

- Be extremely careful when walking backwards, you could stumble.
- Do not use the SweeperPro in the rain or in damp or wet conditions.
- Do not work with the SweeperPro near the edges of swimming pools or other water features.
- Never leave the SweeperPro in the work area without supervision.
- When you stop working, place the SweeperPro in a safe location.
- Unplug the power when you stop working or before moving to a different work location. Always turn the machine off while carrying it.
- In the event that you hit an obstacle while in use, turn the SweeperPro off and remove the obstacle.
- Check the SweeperPro for damage and have it repaired if necessary.

### **Electrical safety**

- Keep the extension cord away from the SweeperPro. Never use the SweeperPro in the rain.
- It is necessary to regularly inspect the power/extension cord for damage and signs of wear and tear.
- In the event that the power/extension cord is damaged, immediately unplug the power cord.
- The socket on the extension cord must be water resistant.
- Only use approved extension cords with the corresponding conductor cross-sections. Please consult your electrician.

## Introduction

- The SweeperPro is the ideal machine for making your life a lot easier when maintaining your artificial lawn.
- Give your artificial lawn that professionally brushed-up appearance.
- GardenMark's SweeperPro includes a unique collection box that is ideal for collecting leaves, pine needles, and unwanted debris.
- The SweeperPro also lifts the pile of your artificial grass.
- The highly powered rotating heavy duty nylon drum lifts the pile at an incredible rate.
- This is the perfect machine for maintaining your artificial grass.
- For collecting debris, we recommend you push the SweeperPro forward, for pile lifting, simply pull the SweeperPro backwards, making sure to pull the SweeperPro against the pile of the grass.
- BONUS 50 ft Power Cord Included.

## Features

- Includes 50 ft Power Cord.
- Ideal for cleaning and brushing Artificial Grass.
- Will revitalizing artificial lawns.
- Collects moss, leaves, pine needles and more.
- 5 position depth adjustment.
- Light weight and easy to use with adjustable handlebar design.
- Durable 15 inch heavy duty brush.
- Folds away for easy storage.

## Product Overview

- Voltage: 110V~60Hz
- Input Power: 13A
- No-load speed (RPM): 3500
- Front Wheels: 8"
- Real Wheels: 6"
- Working Width: 15"
- Working height: 1/4"-1/2"
- Collection Bag: 48 L
- Cable Specifications: 16AWG,  
• BLACK, 50ft




- (1) SweeperPro Body (A)
- (1) Collection Basket (B)
- (2) Bottom Handles (C)
- (1) Middle Handle (D)
- (1) Top Handle (E)
- (4) Retaining Clamps (F)
- (2) Spine Connectors (G)
- (1) Power Cord Safety Clamp (H)

## Sweeper Assembly

Attach the Bottom Handle (C) using the Spine Connector (G) to the SweeperPro Body (A). Using the Spine Connector (G) you can adjust the handle height.




Slide the Power Cord Safety Clamp (H) through the Middle Handle (D) to the middle position. Screw the Middle Handle (D) to the Bottom Handle (C) using two retaining Clamps (F).

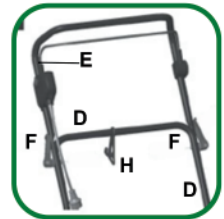


Attach the Top Handle (E) to the Middle Handle (D). Using the remaining two Retaining Clamps (F)



Attached the power cord using the plastic clips.

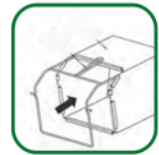

Place the steel frame into the fabric Collection Basket (B), and attach all the fasteners to the left, right and rear poles of the frame, making sure that all the fasteners are secure.

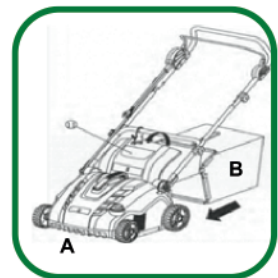


Install the assembled Collection Basket (B) to the SweeperPro Body (A) by lifting the protective cover on the SweeperPro Rear body and rest on the fastening points on the rear of the body.

The protective cover will rest on the Collection Basket.

## Operation

### Turning on the SweeperPro:

- Press the and hold the Safety Button (1).
- Pull the Starting lever (2) towards the handle.
- Release the Safe Bottom.

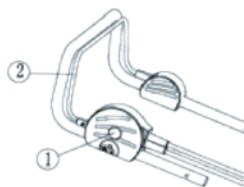

### Turning off the SweeperPro:

- Release the starting lever



### Operating the SweeperPro:

- For comfortable work with the SweeperPro, it is best to start working at the location closest to the power source and to proceed away from the power source.
- Brush the lawn at a right angle from the power source and place the power cord on the side that has already been brushed.
- Do not place too much strain on the motor when working, especially in demanding conditions.
- When the motor is put under strain, the motor speed will decline, and you will hear a change in the noise of the motor. Whenever this happens, stop working, release the starting lever and reduce the brush depth, otherwise the machine could be damaged.
- NOTE: The motor is protected by a safety mechanism that is activated at the instant that the brush is caught, or the engine is overloaded. Whenever this occurs, turn the SweeperPro off and pull the power plug out of the power source.
- The safety mechanism will reset only when the starting lever is released.
- Remove all obstacles and wait several minutes before resetting the safety mechanism and resuming work. At this point, do not touch the starting lever as this will extend the safety mechanism reset time. In the event that the SweeperPro turns off again, raise the height of the brush, which will reduce the load on the motor.

## Maintenance Cleaning the SweeperPro:

- Danger! Use extreme caution as the rotating brush may cause injuries.
- Prior to maintenance, disconnect the SweeperPro from the power source and wait for the motor to stop.
- While performing maintenance, use work gloves.
- The SweeperPro should be cleaned after every use.
- Do not clean the SweeperPro under running water.
- Do not use hard or pointed items for cleaning the SweeperPro.

## 1 Year Limited Warranty

The original purchaser for this unit is provided with a ONE-YEAR WARRANTY.

Covered Under Warranty:

- The warranty begins from the date of purchase.
- For the first year, coverage is for both parts and labor on warranty repair services.
- **Note:** Customers must provide proof of purchase to initiate the repair work under warranty. We strongly recommend keeping your original receipt.

## Not Covered Under Warranty

- We do not offer a warranty for products that have been bought second hand or as a resold product.
- Issues of replacement and refunds on units purchased less than 30 days from an authorized dealer must be addressed to the dealer directly.
- If the products purchased from an authorized dealer are after 30 days from the date of purchase, please send the units to us for service and repair.
- We do not cover the cost of repairs and replacements due to misuse by the owner's improper use or maintenance.
- Water damage to the product voids this warranty.
- All replacement costs for either the brush head or other parts will be the owner's responsibility.
- The warranty is void if the unit has been altered or an unauthorized person has damaged the unit while attempting repair work.

## Disposal:

Instructions and information regarding the disposal of used packaging materials. Dispose of used packaging material at a site designated for waste in your municipality.

The machine and its accessories are manufactured from various materials, e.g., metal and plastic. Take damaged parts to a recycling center. Inquire at the relevant government department.

This product meets all the basic requirements of US directives that apply to it. Changes in the text, design, and technical specifications may be made without prior notice and we reserve the right to make these changes.

